


Alape[®]

Montageanleitung
 Montageaanwijzing
 Monteringsanvisning
 Instrucciones de montaje


Assembly Instruction
 Instructions de montage
 Istruzioni di montaggio

Flaschensiphon aus Kunststoff mit flexiblem Abgangsohr ist serienmäßiger Lieferumfang.
 Plastic bottle trap with flexible outlet-tube is part of serially scope of supply.


WP.Insert1
 Nr. 5241 000 000

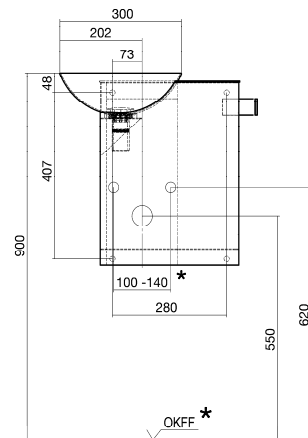


WP.Insert2
 Nr. 5242 000 000

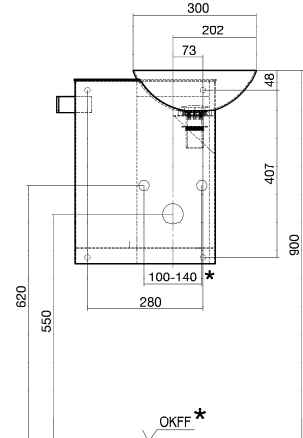


WP.Insert3
 Nr. 5243 000 000

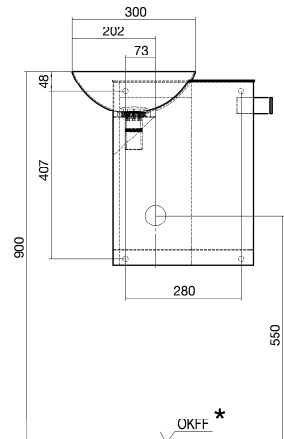

WP.Insert4
 Nr. 5244 000 000

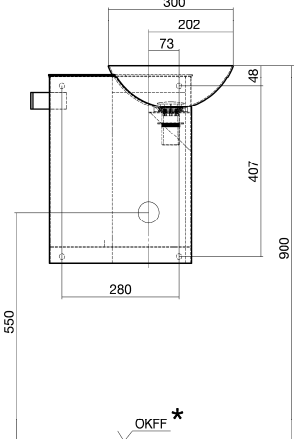

WP.Insert5
 Nr. 5245 000 000

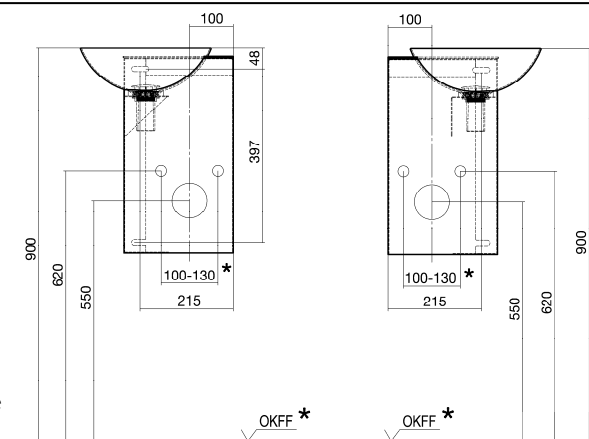


Wahlweise Anschluss
 linksseitig oder rechtsseitig.
 Optionally water supply
 sinistral or dexter.

*OKFF = Oberkante Fertiger Fußboden / Finished Floor Level (FFL)


Bovenkant afgewerkte vloer / Sol fini / Nivel pavimento acabado / Pavimento finito

WP.Insert1 / WP.Insert2 / WP.Insert3 WP.Insert4 / WP.Insert5


1.

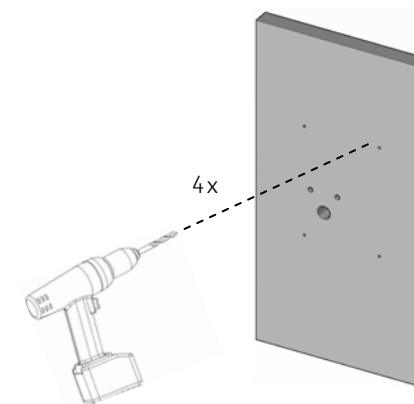


2.

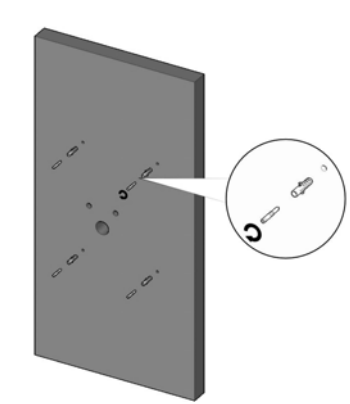


3.






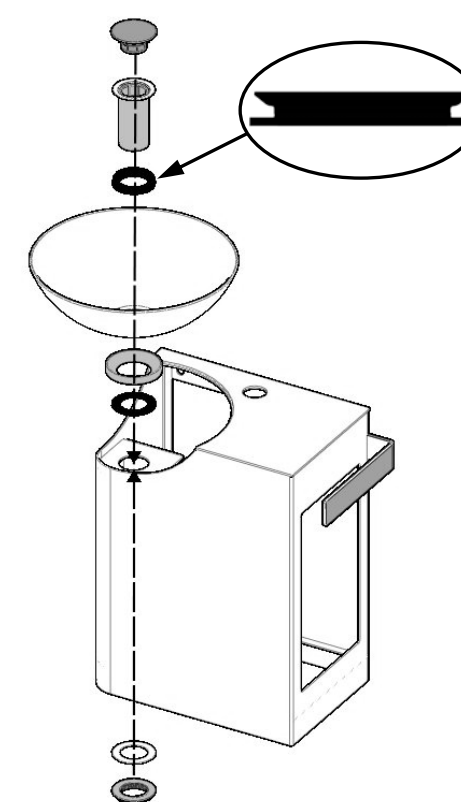


3a.

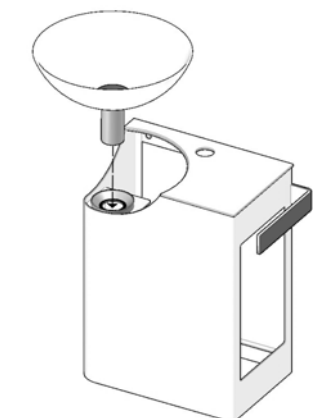


3b.

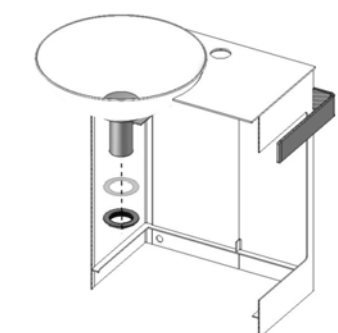


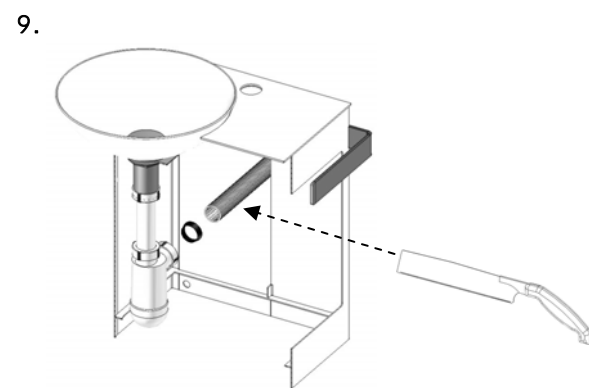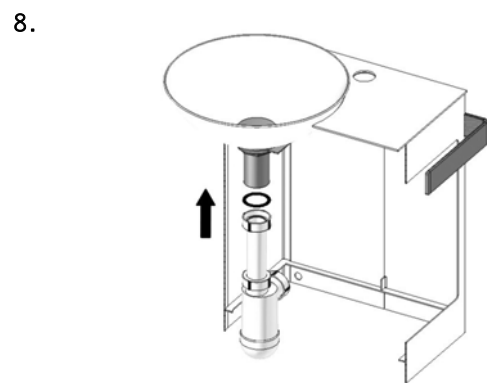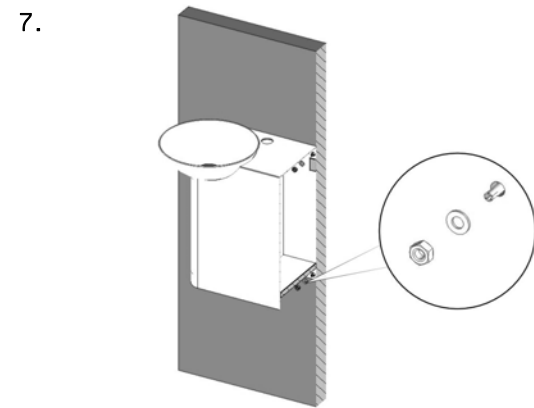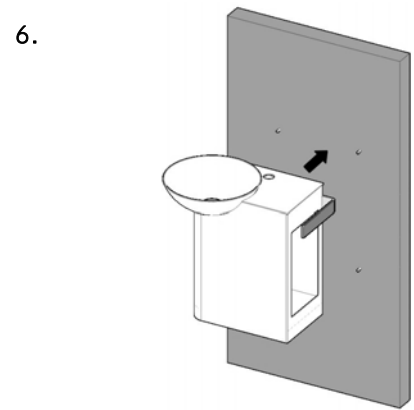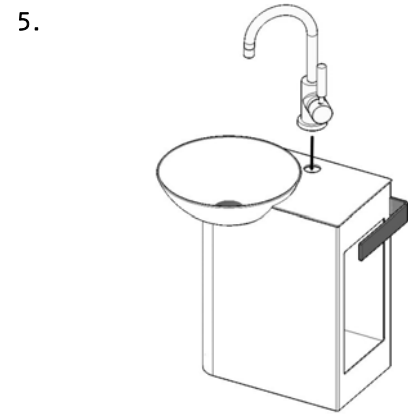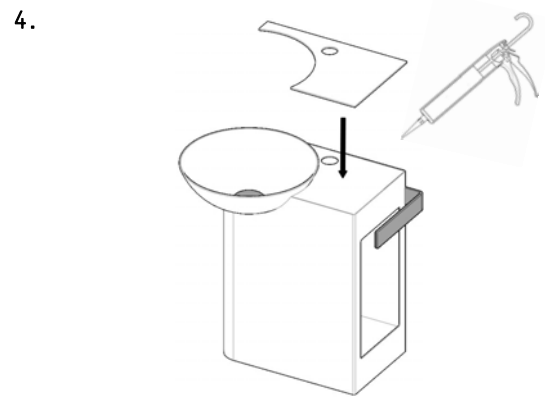


10.

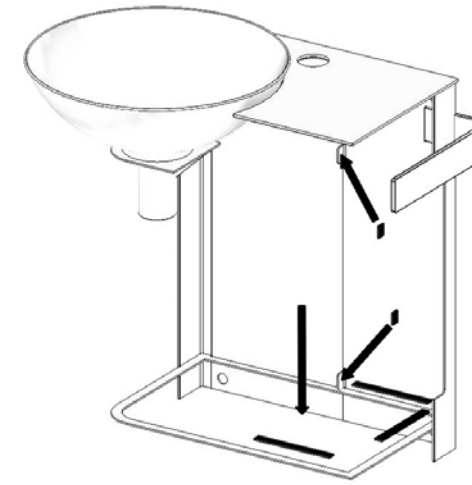

11.

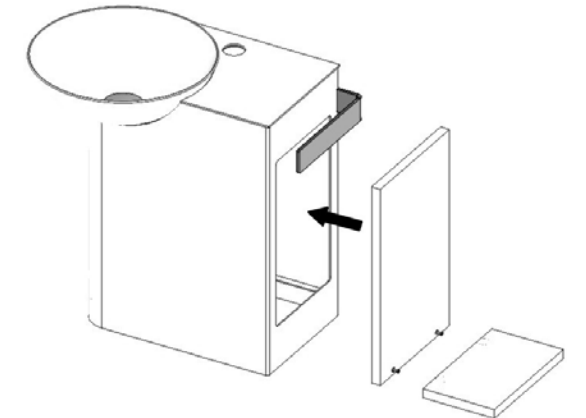

12.

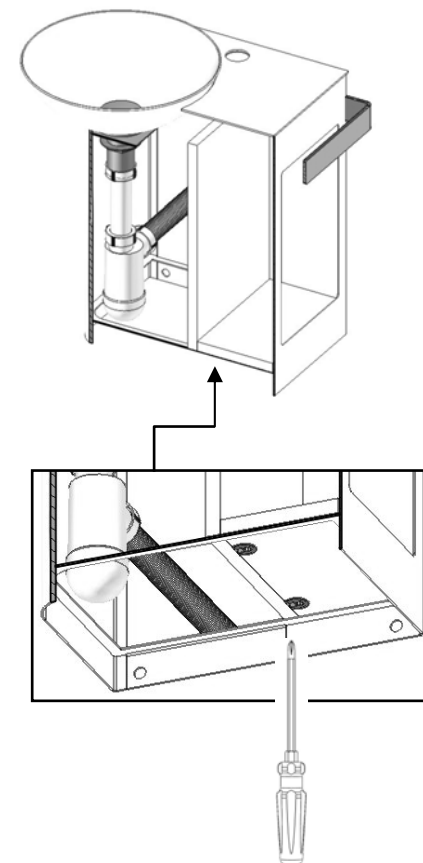

13.

